






Installation Steps - Industrial Fan safety Net Cover

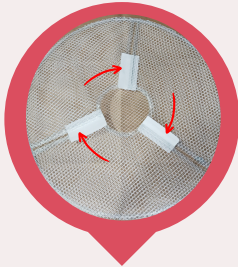

PLEASE OPEN ALL THREE VELCRO PIECES.



INSERT THE SAME ON ALL THREE SIDES FROM FRONT TO BACK OF THE FAN.

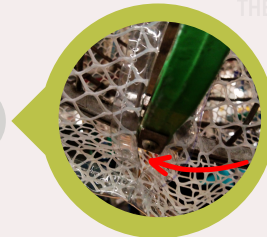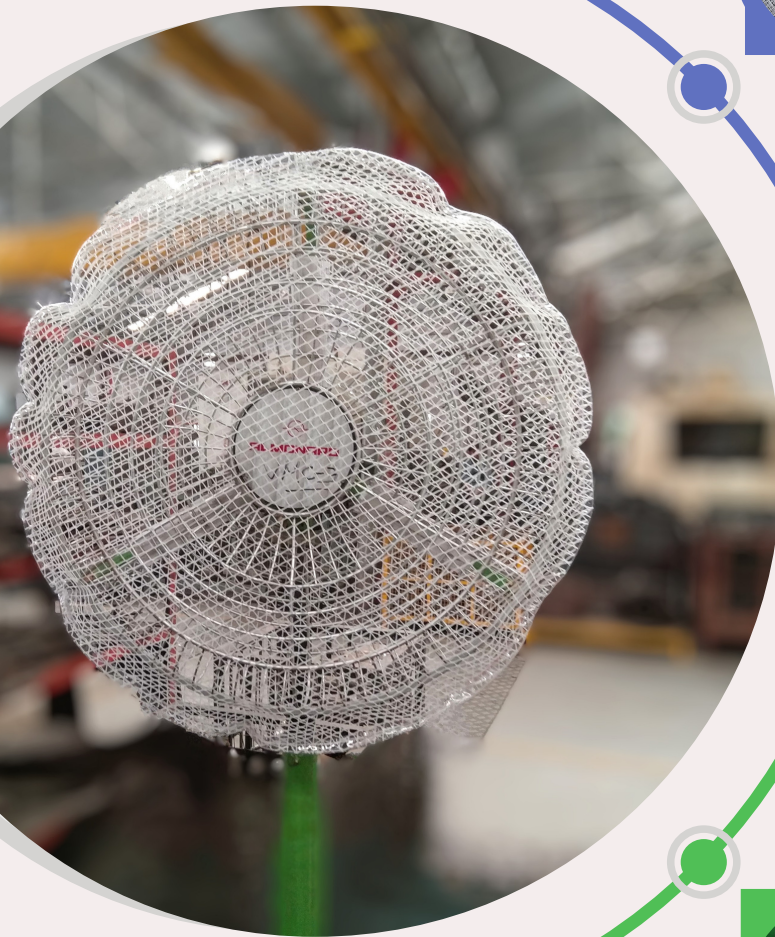

ENSURE EACH CUT SECTION MATCHES A GREEN SUPPORT ON THE FAN.



PLEASE VERIFY THE FAN BACK SIDE AT THE SPECIFIED AREA FOR ANY OBSTRUCTIONS.



CLOSE ALL SIDES WITH VELCRO ONE BY ONE.



NETTING SOLUTIONS
THE WAY YOU NEED IT

